


FIG. 21 FRONT WHEEL

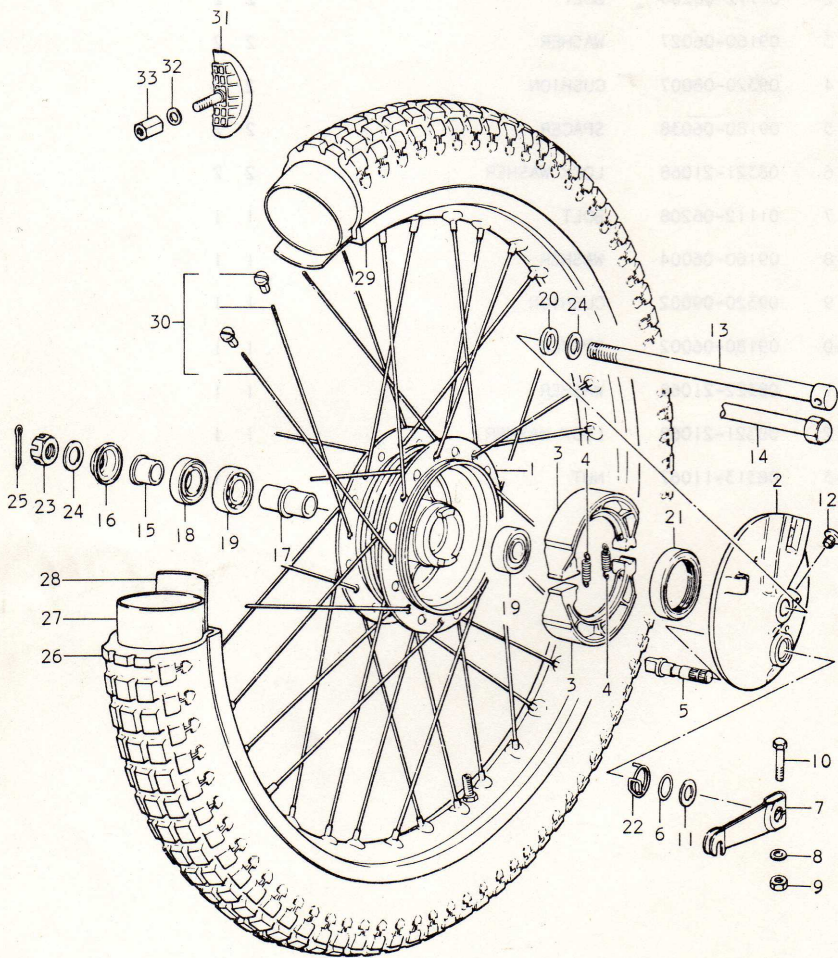

RL250

FIG.21 FRONT WHEEL

Ref.No.	Part No.	Description	Q'ty		Remarks
			L	M	
	54100-28840	FRONT WHEEL SET	1	-	} to 54100-28841 - Include Ref.Nos. 1, 16 and 28.
	54100-28841	FRONT WHEEL SET	1	1	
1-1	54110-38000	DRUM, front hub	1	-	to 54110-28301
1-2	54110-28301	DRUM, front hub	1	1	
2	54210-38000	PANEL, front hub	1	1	
3	54410-01005	SHOE, brake	2	2	
4	09443-07001	SPRING, brake shoe	2	2	
5-1	54441-28001	CAM, brake	1	-	to 54441-01002
5-2	54441-01002	CAM, brake	-	1	
6	09280-12001	DUST SEAL	1	1	
7	54451-38000	LEVER, brake cam	1	1	
8	08322-21068	WASHER	1	1	
9	08311-11068	NUT	1	1	
10	09100-06050	BOLT	1	1	
11	09160-12011	WASHER	1	1	
12	09250-11003	PLUG	1	1	
13	54711-38000	AXLE, front	1	-	
14	54711-16502	AXLE, front	-	1	
15	09180-12057	SPACER, front axle RH	1	1	
16	54892-28001	COVER, dust seal	1	1	
17-1	09180-12059	SPACER, bearing	1	-	to 09180-12041
17-2	09180-12041	SPACER, bearing	-	1	
18	09284-18002	OIL SEAL	1	1	
19	09262-12002	BEARING	2	2	
20	09180-12058	SPACER, axle LH	1	1	
21	09285-43001	OIL SEAL	1	1	

RL250

FIG.21 FRONT WHEEL

Ref.No.	Part No.	Description	Q'ty		Remarks
			L	M	
22	09448-27005	SPRING	1	1	
23-1	08314-41128	NUT	1	-	
23-2	08314-31128	NUT	-	1	
24	08322-11128	WASHER	2	2	
25	04111-30308	COTTER PIN	1	1	
26	55100-28410	TIRE, front	1	1	2.75-21 trial
27	55200-16510	TUBE, inner	1	1	2.75-21
28	55261-16510	PROTECTOR, inner tube	1	1	25x21
29-1	55311-28321	RIM, wheel	1	-	to 55311-28322
29-2	55311-28322	RIM, wheel	1	1	
30	55300-28850	SPOKE SET	1	1	
31	65270-30000	STOPPER, bead	1	1	1.85B
32	08322-21088	WASHER	1	1	
33	09159-08016	NUT	1	1	

RL250

00517