


FIG.15 FUEL TANK - SEAT

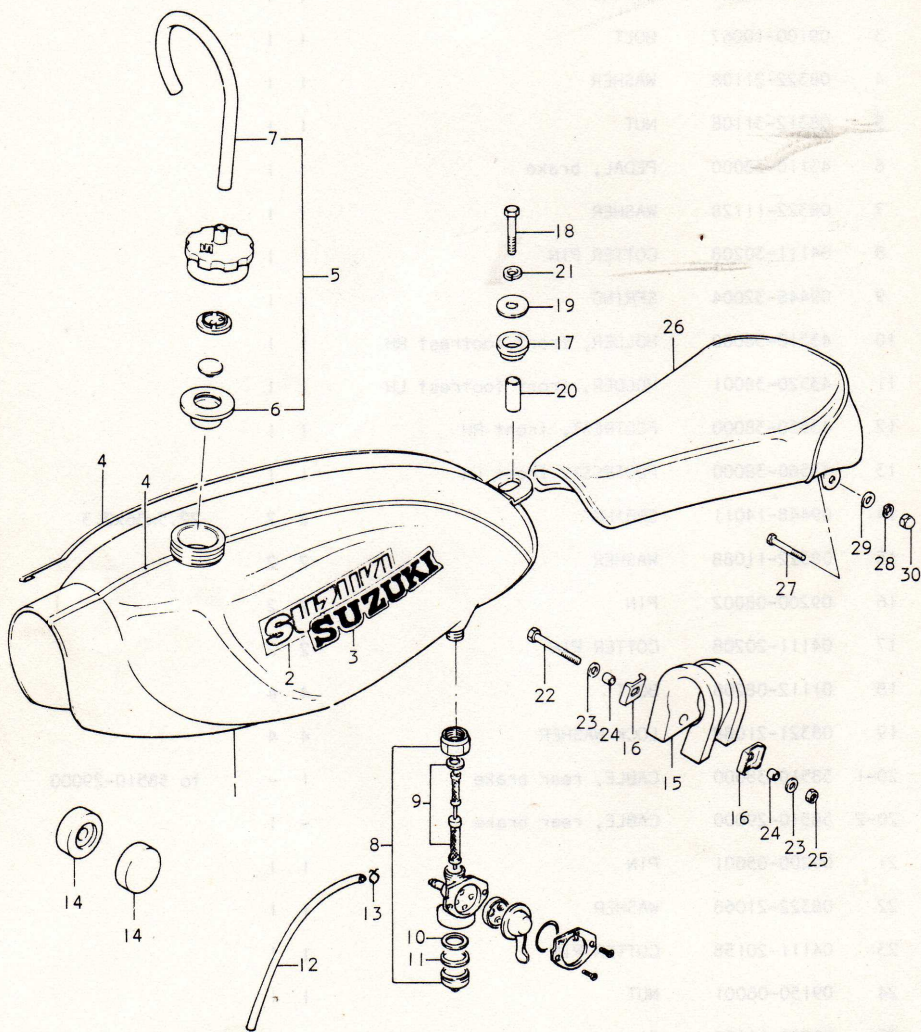

RL250

FIG.15 FUEL TANK - SEAT

Ref.No.	Part No.	Description	Q'ty		Remarks
			L	M	
1-1	44110-38000-714	TANK, fuel	1	-	Material:Aluminium to 44110-38001-714 Material:Steel
1-2	44110-38001-714	TANK, fuel	1	-	
1-3	44110-38001-997	TANK, fuel	-	1	
2	68111-38000-719	EMBLEM, fuel tank	2	-	
3	68111-38600-998	EMBLEM, fuel tank	-	2	
4	68115-38000-064	TAPE, striping	2	2	
5	44200-28300	CAP ASSY, fuel tank	1	1	
6	44248-28300	GASKET, fuel tank cap	1	1	
7	09343-05076	HOSE, breather	1	1	
8-1	44300-05110	COCK ASSY, fuel	1	-	to 44300-05111
8-2	44300-05111	COCK ASSY, fuel	-	1	
9	44300-01882	FILTER SET	1	1	
10	44344-05110	NET, filter	1	1	
11	44346-05110	GASKET, cup	1	1	
12	09343-05036	HOSE	1	1	L:150
13	09401-08401	CLIP	2	2	
14	09329-10007	CUSHION	2	2	
15	44541-30000	CUSHION, fuel tank rear	1	1	
16	44549-30000	PLATE, rear cushion	2	2	
17	09320-12013	CUSHION	1	1	
18	01122-08408	BOLT	1	1	
19	09160-08025	WASHER	1	1	
20	09180-08045	SPACER	1	1	
21	08321-21088	LOCK WASHER	1	1	
22	01112-06508	BOLT	1	1	

RL250

0811A

FIG.15 FUEL TANK - SEAT

Ref.No.	Part No.	Description	Q'ty		Remarks
			L	M	
23	08322-11068	WASHER	2	2	
24	09180-06032	SPACER	2	2	
25	08311-11068	NUT	1	1	
26	45100-38000-403	SEAT	1	1	
27	01112-06408	BOLT	2	2	
28	08321-21068	LOCK WASHER	2	2	
29	08322-21068	WASHER	2	2	
30	08313-11067	CROWN NUT	2	2	

RL250