


FIG. 8 TRANSMISSION

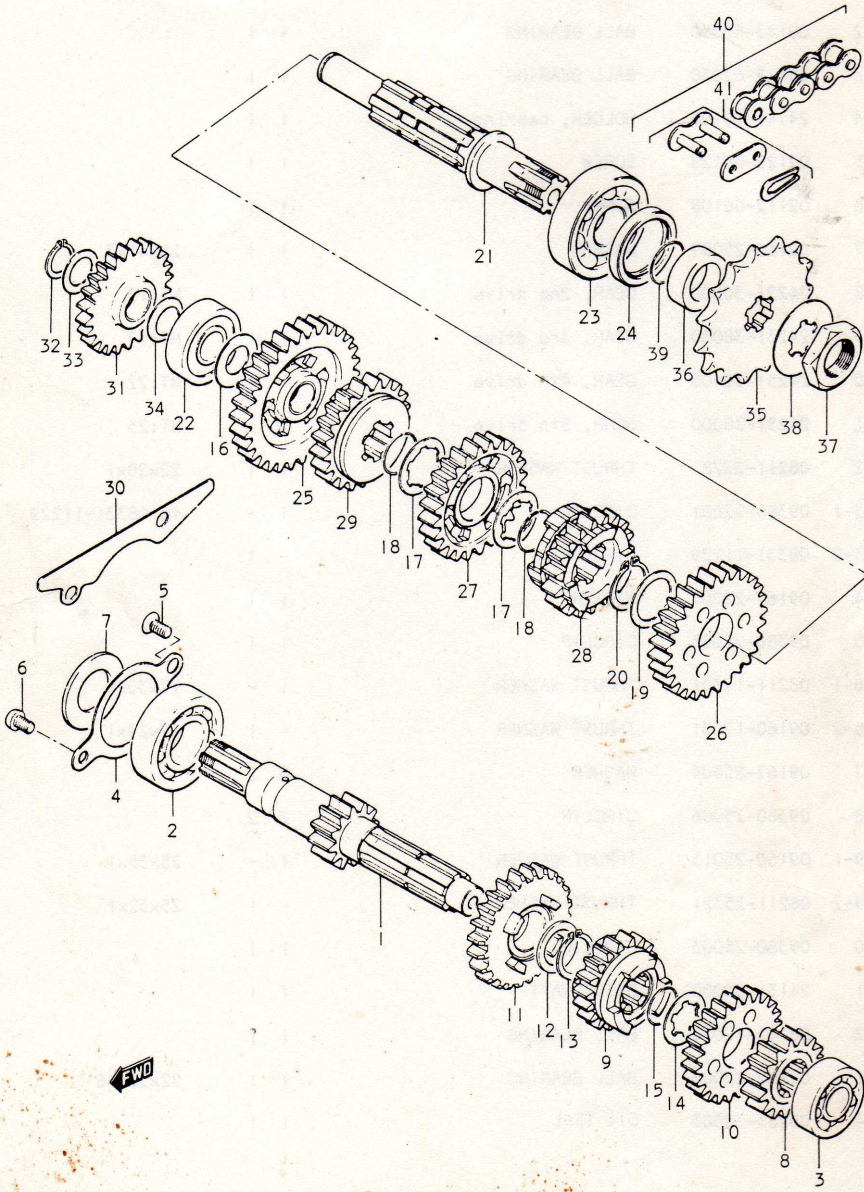

RL250

FIG.8 TRANSMISSION

Ref.No.	Part No.	Description	Q'ty		Remarks
			L	M	
1	24121-30000	COUNTERSHAFT	1	1	NT:12
2	08143-62050	BALL BEARING	1	1	
3	08113-62030	BALL BEARING	1	1	
4	24741-30100	HOLDER, bearing	1	1	
5	02122-06128	SCREW	1	1	
6	02112-06108	SCREW	1	1	
7	09160-25009	WASHER	1	1	25x41x3
8	24221-30000	GEAR, 2nd drive	1	1	NT:15
9	24231-38000	GEAR, 3rd drive	1	1	NT:17
10	24251-30400	GEAR, 4th drive	1	1	NT:22
11	24251-38000	GEAR, 5th drive	1	1	NT:25
12	08211-22281	THRUST WASHER	1	1	22x28x1
13-1	09380-22001	CIRCLIP	1	-	to 08331-11229
13-2	08331-11229	CIRCLIP	-	1	
14	09167-22007	WASHER	1	1	
15	09380-22003	CIRCLIP	1	1	
16-1	08211-17301	THRUST WASHER	1	-	17x30x1
16-2	09160-17001	THRUST WASHER	-	1	17x29x1
17	09167-25004	WASHER	2	2	
18	09380-25006	CIRCLIP	2	2	
19-1	09160-25013	THRUST WASHER	1	-	25x35x1
19-2	08211-25321	THRUST WASHER	-	1	25x32x1
20	09380-25003	CIRCLIP	1	1	
21	24131-30000	DRIVESHAFT	1	1	
22	08143-62030	BALL BEARING	1	1	
23	09262-22006	BALL BEARING	1	1	22x56x16
24	09283-32003	OIL SEAL	1	1	

RL250

FIG.8 TRANSMISSION

Ref.No.	Part No.	Description	Q'ty		Remarks
			L	M	
25	24310-38000	GEAR, 1st driven	1	1	NT:29
26	24321-30000	GEAR, 2nd driven	1	1	NT:27
27	24331-38000	GEAR, 3rd driven	1	1	NT:24
28	24351-30101	GEAR, 4th driven	1	1	NT:21
29	24351-38000	GEAR, 5th driven	1	1	NT:16
30	24871-30000	PLATE, oil reservoir	1	1	
31	26260-30001	GEAR, kick starter idle	1	1	NT:22
32	09380-17001	CIRCLIP	1	1	
33	08211-17251	THRUST WASHER	1	1	
34	09164-17002	WASHER	1	1	
35-1	27511-38700	SPROCKET, engine	1	1	NT:15
35-2	27511-38720	SPROCKET, engine	-	1	NT:14
35-3	27511-38000	SPROCKET, engine	1	1	NT:16 } OPT
36	09180-22007	SPACER	1	1	
37	09140-22003	NUT	1	1	
38	09167-22005	WASHER	1	1	
39	09280-22003	O RING	1	1	
40-1	27600-28310	CHAIN ASSY, drive (#428x124ℓ)	1	-	#428x120ℓ to 27600-28311
40-2	27600-28311	CHAIN ASSY, drive (#428x126ℓ)	-	1	#428x120ℓ
41	27620-28310	JOINT, drive chain	1	1	

RL250