


FIG.14 PROP STAND - FOOTRESTBAR

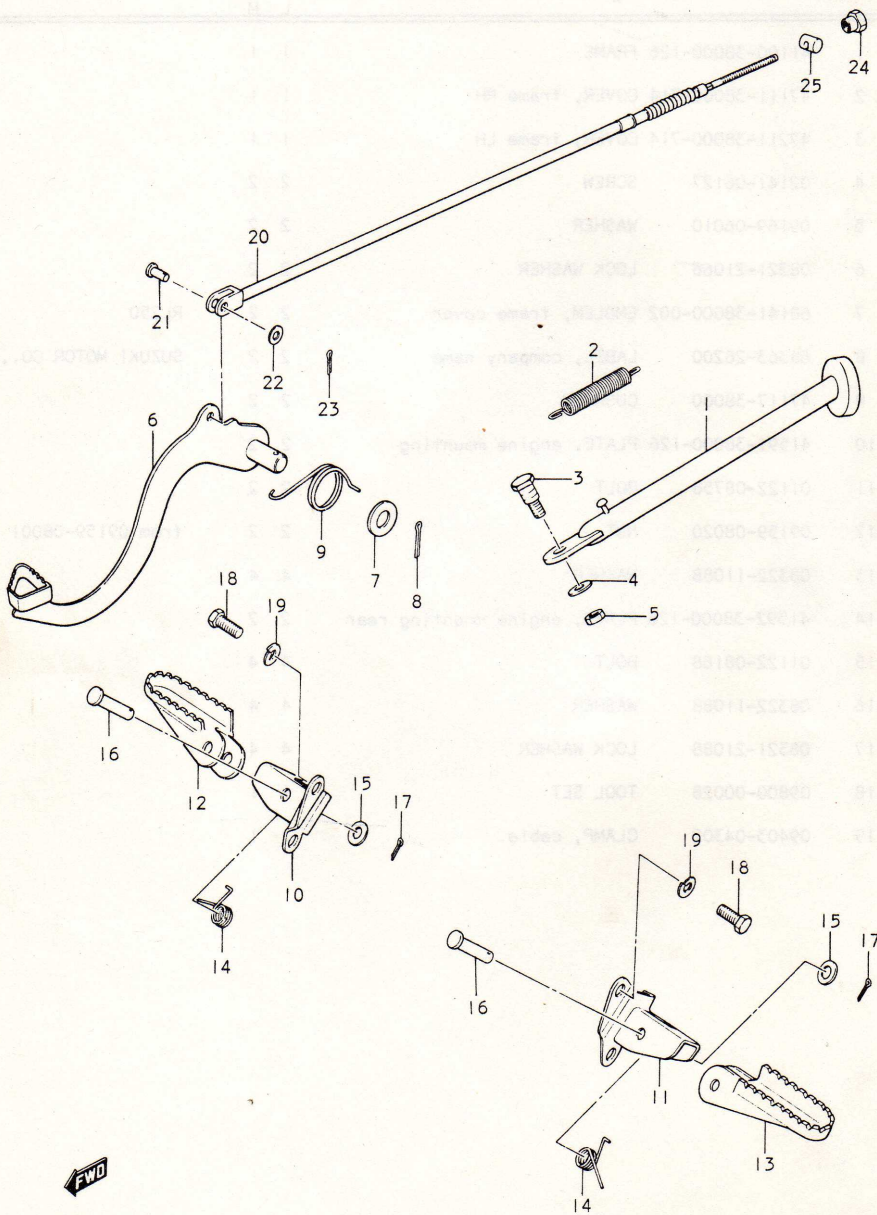

RL250

FIG.14 PROP STAND - FOOTRESTBAR

Ref.No.	Part No.	Description	Q'ty		Remarks
			L	M	
1	42310-38001-126	STAND, prop	1	1	
2	09443-14005	SPRING	1	1	
3	09100-10067	BOLT	1	1	
4	08322-21108	WASHER	1	1	
5	08312-31108	NUT	1	1	
6	43110-38000	PEDAL, brake	1	1	
7	08322-11128	WASHER	1	1	
8	04111-30208	COTTER PIN	1	1	
9	09448-32004	SPRING	1	1	
10	43510-38000	HOLDER, front footrest RH	1	1	
11	43520-38001	HOLDER, front footrest LH	1	1	
12	43550-38000	FOOTREST, front RH	1	1	
13	43560-38000	FOOTREST, front LH	1	1	
14	09448-14011	SPRING	2	2	22.5x36x2.3
15	08322-11088	WASHER	2	2	
16	09200-08002	PIN	2	2	
17	04111-20208	COTTER PIN	2	2	
18	01112-08208	BOLT	4	4	
19	08321-21088	LOCK WASHER	4	4	
20-1	58510-38000	CABLE, rear brake	1	-	to 58510-29000
20-2	58510-29000	CABLE, rear brake	-	1	
21	09200-05001	PIN	1	1	
22	08322-21068	WASHER	1	1	
23	04111-20158	COTTER PIN	1	1	
24	09150-06001	NUT	1	1	
25	09209-11002	PIN	1	1	

RL250